 




HDMI Switch & Splitter

Article number: VSWI3482AT

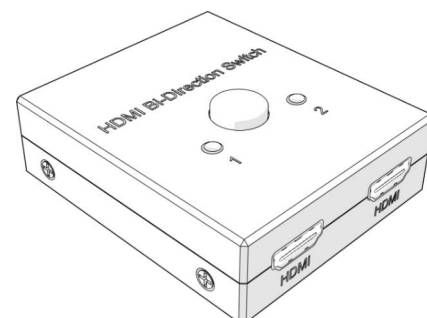

Nedis BV
De Tweeling 28, 5215 MC 's-Hertogenbosch, The Netherlands 10/19

Preface

Thank you for purchasing the Nedis VSWI3482AT.

This document is the user manual and contains all the information for correct, efficient and safe use of the product.

This user manual is addressed to the end user. Read this information carefully before installing or using the product.

Always store this information with the product for use in the future.

Product description

Intended use

The Nedis VSWI3482AT Splits 1 or switches between 2 HDMI signals, depending on the configuration.

The product is exclusively intended for switching between HDMI signals using the switch button.

Configuration A allows the user to switch between 2 different source devices on a single display.

Configuration B allows the user to switch between 2 different display with a single source device.

The product is not intended for professional use.

Any modification of the product may have consequences for safety, warranty and proper functioning.

Specifications

Product

HDMI Switch & Splitter

Article number

VSWI3482AT

Resolution

Up to 4K2K at 60 Hz

 
Data rate

5.4 Gbps

HDMI type

HDMI 19 pin female

Main parts (image A)

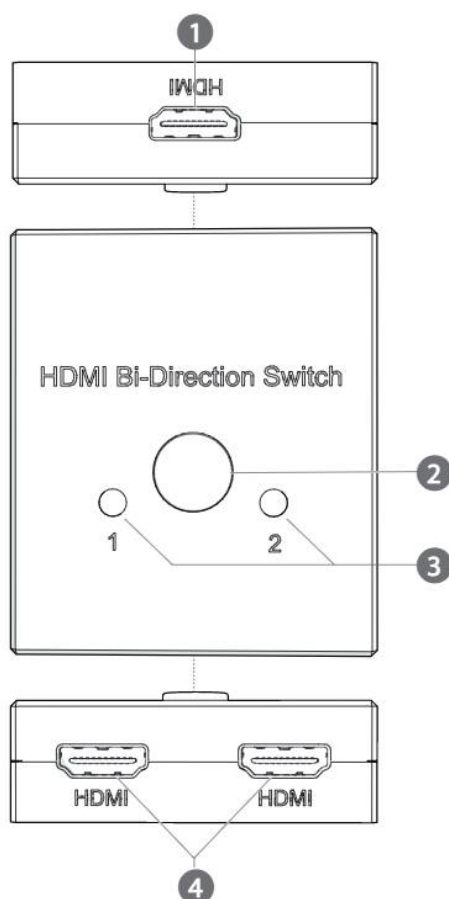

A

① 1 HDMI port

② Switch button

③ Status indicator LED

④ 2 HDMI port

Safety instructions

- Do not use a damaged product.
- Do not expose the product to direct sunlight, naked flames or heat.
- Do not expose the product to water or moisture.
- Place the product on a stable and flat surface.
- Do not drop the product and avoid bumping.
- Do not open the product.
- Keep the product out of reach from children.
- Make a backup of your data prior to first use.

Installation

 
Check the contents of the package

Check that all parts from the parts list are present and that no damage is visible on the parts. If parts are missing or damaged, contact the Nedis B.V. service desk via the website: www.nedis.com.

Connecting the product


- **i** Make sure all the devices you want to connect have been switched off.
- **i** Depending on the configuration you want to use, follow one of these instructions accordingly.
- **i** In configuration B, only one monitor can be used simultaneously.

Configuration A (image B)

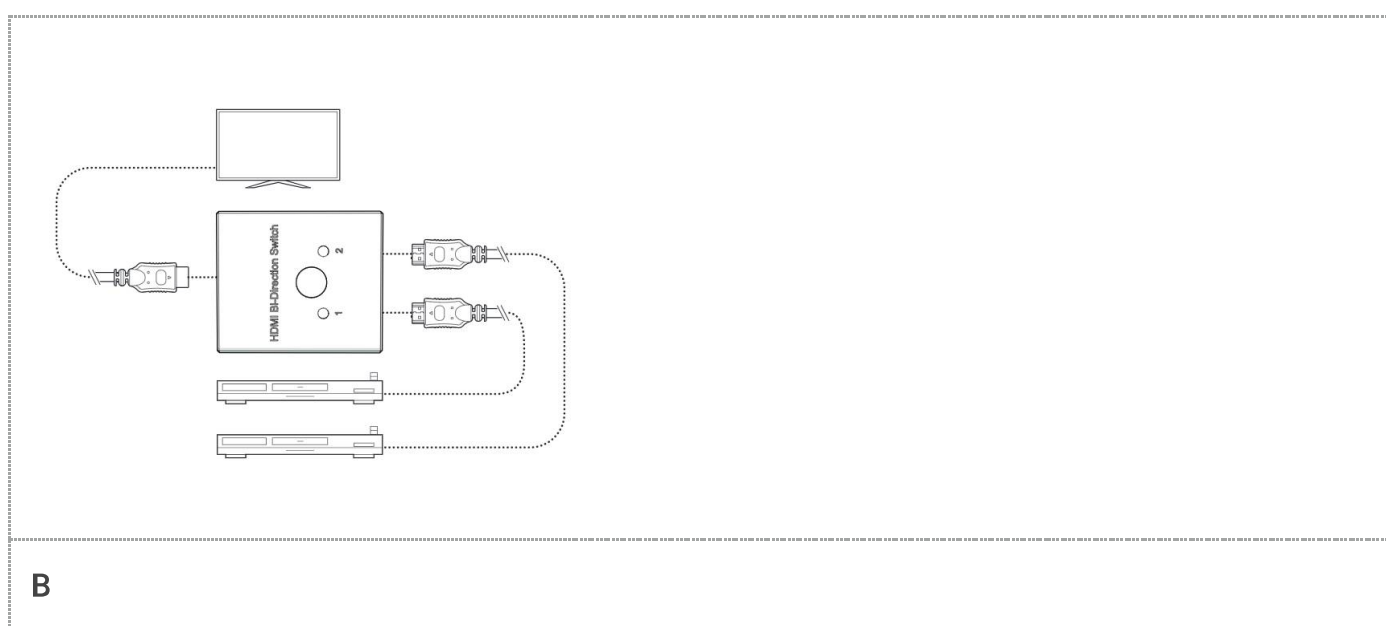

1. Plug 2 HDMI cables (not included) into **A4**.
2. Plug the other end of the HDMI cables into the source devices.

 Configuration B (image C)

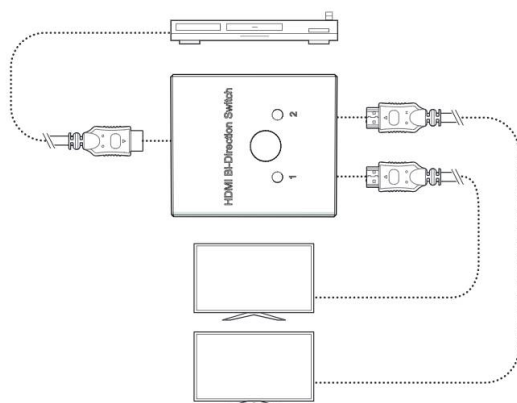

C

1. Plug 2 HDMI cables (not included) into **A4**.
2. Plug the other end of the HDMI cables into the displays.
3. Plug an HDMI cable (not included) into **A1**.
4. Plug the other end of the HDMI cable into a source device.

Maintenance

Clean the product regularly with a soft, clean, dry cloth. Avoid abrasives that can damage the surface.

Do not use aggressive chemical cleaning agents such as ammonia, acid or acetone when cleaning the product.

Warranty

Any changes and/or modifications to the product will void the warranty. We accept no liability for damage caused by improper use of the product.

Disclaimer

Designs and specifications are subject to change without notice. All logos, brands and product names are trademarks or registered trademarks of their respective owners and are hereby recognized as such.



This symbol indicates that this product should not be thrown away with other household waste throughout the EU. To prevent possible harm to the environment or human health by uncontrolled waste disposal, you are responsible for recycling it so that it can promote the sustainable reuse of raw materials. To return your used product, you can use the regular return and collection systems or contact the store where the product was purchased. They can recycle this product for the environment.

